


Magnetic Developers



Q-View Magnetic Developer allows you to examine magnetic encoding on magstrips and make photomicrographs.

A fully developed card is shown in Q-Card's Magnetic Stripe Location Gauge, which enables you to verify encoded track locations.

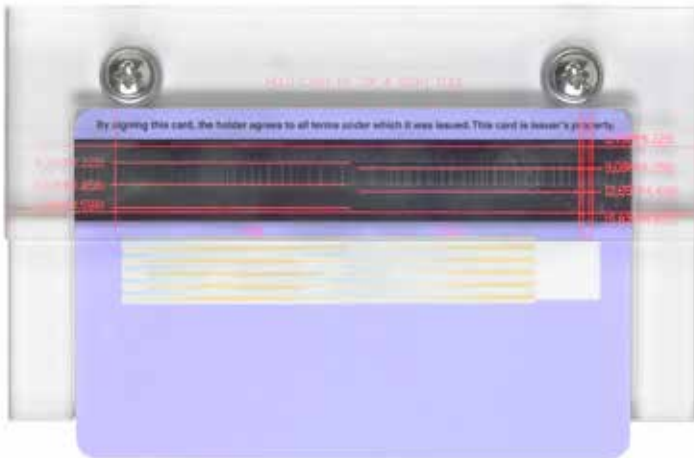

Magnetic Developers

Q-View magnetic developer allows you to visually examine magnetic encoding on magstrips with the naked eye and make photomicrographs. It can help you identify alignment problems, see damage, and perform quality inspection on your magnetic stripe cards and card readers.


Our developer is a combination of tiny magnetic particles suspended in a clear solvent liquid carrier. When applied to the card, the particles attract to the magnetically charged parts of the stripe and the liquid evaporates.

Q-View comes in three styles to meet your application needs and preference.

- Spray style (2 oz.) - convenient aerosol application
- Dropper style (2 oz.) - easy to use dropper application
- Squeeze style (4 oz.) - squeeze bottle for faster application in production settings

Ordering Details

Part #	Description
QCA1001	Spray-style, 2 US fl. oz.
QCA1006	Dropper-style, 2 US fl. oz.
QCA1038	Squeeze-style, 4 US fl. oz.

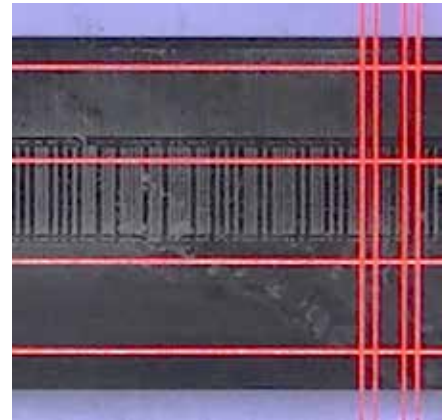

Magnified view of encoded tracks.

Specifications



QCA1001 Spray Style Magnetic Developer

- Aerosol spray style allows for fast, efficient developing of multiple cards.
- Q-View spray must ship hazardous due to compressed gas. This impacts express shipments only (air and international). There is a \$55 fee assessed for hazardous air shipments. Ground shipments delivered in the U.S. and Canada are not impacted.
- 2 US fluid ounces.



QCA1006 Dropper Style Magnetic Developer

- Easy to use dropper style provides precise application of developer.
- Includes glass dropper, laboratory grade glass bottle and separate cap.
- 2 US fluid ounces



QCA1038 Squeeze Style Magnetic Developer

- Squeeze applicator allows for efficient flow and simple application of developer.
- Includes laboratory grade plastic bottle, squeeze applicator and separate cap.
- 4 ounce bottle provides best value.



301 Reagan Street
Sunbury, PA 17801 USA
Phone: 570.286.7447
Fax: 570.286.2649
www.q-card.com



800-717-8007